



**Gen-mate
inside**

OWNER'S MANUAL

Smart Inverter GENERATOR

Wi-Fi 

SE2000i
SE2000iE



VER2.5-20211206

CONTENT

1. SAFETY INFORMATION	- 6 -
1.1 OPERATOR ATTENTION	- 6 -
1.2 EXHAUST FUMES HAZARDS	- 7 -
1.3 ELECTRIC SHOCK HAZARDS	- 8 -
1.4 FIRE AND BURN HAZARDS	- 9 -
1.5 CONNECTION NOTES	- 11 -
2. IMPORTANT LABEL LOCATIONS.....	- 11 -
3. UNIT DESCRIPTION	- 14 -
3.1 COMPONENTS IDENTIFICATION	- 14 -
3.2 CONTROL PANEL	- 16 -
4. PREPARATION	- 17 -
4.1 ENGINE OIL.....	- 17 -
4.2 FUEL	- 19 -
5. STARTING THE ENGINE	- 20 -
5.1 CHECK ENGINE OIL	- 21 -
5.2 CHECK FUEL.....	- 22 -
5.3 OPEN THE FUEL CAP VENT LEVER	- 23 -
5.4 OPEN THE FUEL TAP	- 24 -
5.5 THE ENGINE SWITCH & ECO SWITCH	- 25 -
5.6 USE CHOKE	- 26 -
5.7 START THE ENGINE.....	- 27 -
5.8 CLOSE CHOKE	- 30 -
6. AC OPERATION.....	- 31 -
6.1 USE THE GENERATOR:	- 32 -
6.2 SHUT DOWN THE GENERATOR:	- 33 -
7. DC OPERATION	- 36 -
7.1 CONNECTING THE BATTERY CHARGING CABLE:	- 37 -
7.2 DISCONNECTING THE BATTERY CHARGING CABLE:	- 38 -
8. AC PARALLEL OPERATION.....	- 38 -
8.1 START AC PARALLEL	- 39 -
8.2 STOP AC PARALLEL	- 40 -

9. SPECIAL REQUIREMENTS	- 41 -
10. MAINTENANCE	- 43 -
10.1 ENGINE OIL CHANGE	- 45 -
10.2 AIR CLEANER SERVICE.....	- 47 -
10.3 SPARK PLUG SERVICE.....	- 48 -
10.4 SPARK ARRESTER MAINTENANCE.....	- 50 -
10.5 CLEANING FUEL TANK FILTER	- 52 -
11. TRANSPORTATION AND STORAGE.....	- 53 -
11.1 DRAIN THE FUEL FROM THE CARBURETOR.....	- 53 -
11.2 DRAIN THE FUEL FROM FUEL TANK.....	- 55 -
11.3 DRAIN THE FUEL FROM THE CARBURETOR AGAIN.....	- 55 -
11.4 ENGINE.....	- 56 -
12. TROUBLE SHOOTING	- 57 -
13. SPECIFICATIONS.....	- 63 -
14. WIRING DIAGRAM	- 65 -
15. ENVIRONMENT CORRECTION	- 67 -

⚠ WARNING

Read this manual carefully before operating this generator. This manual should stay with this generator if it is sold.



WARNING:



The engine exhaust fumes from this product contains poisonous carbon monoxide (CO) to cause loss of consciousness and may lead to death.

⚠ WARNING

Exhaust contains poisonous carbon monoxide (CO) gas that can build up to dangerous levels in closed areas.

Breathing CO can cause unconsciousness or death.

Never run the generator in a closed or even partially closed area where people may be present.

⚠ WARNING

The generator is a potential source of electrical shock if misused. Do not expose the generator to moisture, rain or snow. Do not let the generator get wet, and do not operate it with wet hands.

Keep this owner's manual handy, so you can refer to it at any time. We reserve the right to modify this product or manual at any time without any notice.

⚠ WARNING

PLEASE READ AND UNDERSTAND THIS MANUAL COMPLETELY BEFORE OPERATING THE GENERATOR.

This manual will provide you with a good basic understanding of the operation and maintenance of this machine.

We continually seek advancements in product design and quality. Therefore, while this manual is the newest, there may be slight difference between your generator and this manual.

INTRODUCTION

Congratulations on your selection of a marvelous generator. We are certain you will be pleased with your purchase one of the greatest portable generators on the market.

This manual will provide you with a good basic understanding of the operation and maintenance of this machine, please read it carefully.

These signal words mean:

 **DANGER**

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

 **WARNING**

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

 **CAUTION**

You **CAN** be **HURT** if you don't follow instructions.

This manual is filled with important safety information — please read it carefully.

If you have any questions, please consult an authorized dealer.


1. SAFETY INFORMATION

1.1 OPERATOR ATTENTION

WARNING

- Read and understand this manual before operating the generator.
- Place the generator in a place where pedestrians, children and pets are not likely to touch. Do not let children operate the generator without supervision. Protect children by keeping them at a safe distance from the generating set.

WARNING

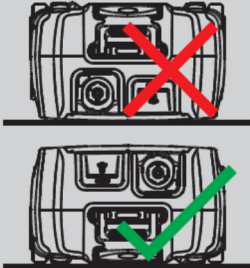

Tilt down only on this side.

- The generator is allowed to be tilted down, but **ONLY** lay on the Drawbar Side, and only after stopping the engine. If lay down on other side, OIL may leak and damage the engine or your property. Also FUEL may leak and cause FIRE or an EXPLOSION.


WARNING

Before tilting down the generator, proceed as follows:

1. Turn OFF fuel tap.
2. Close fuel cap tightly.
3. Turn OFF fuel cap vent lever.



- Turn OFF the Fuel Tap before tilting the generator.

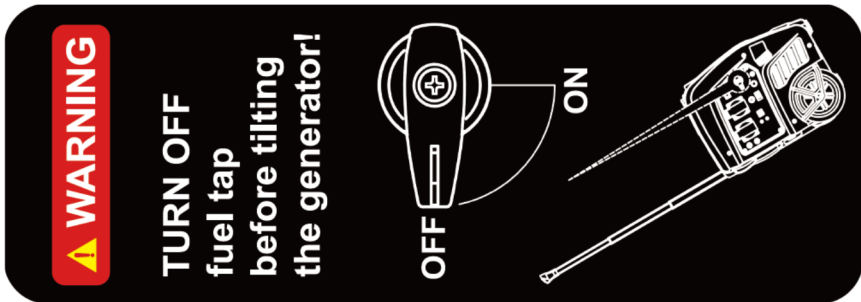



- **DO NOT** remove any cover of the generator case when the engine is running. If not, inverter, alternator or other electric parts may be damaged because of bad cooling.

1.2 EXHAUST FUMES HAZARDS

⚠ DANGER


Using a generator indoors **CAN KILL YOU IN MINUTES**.
Generator exhaust contains carbon monoxide.
This is a poison you cannot see or smell.


 <p>NEVER use inside a home or garage, EVEN IF doors and windows are open.</p>	 <p>Only use OUTSIDE and far away from windows, doors, and vents.</p>
--	---


- Exhaust fumes contains poisonous carbon monoxide (CO) , a colorless and odorless gas. Breathing CO can cause loss of consciousness and may lead to death.
- Never run your generator inside a garage or house, even if door or window is open. Operate the generator in a well-ventilated area.


1.3 ELECTRIC SHOCK HAZARDS


⚠ WARNING


 Read owner's manual and all labels before operating.

 Do not operate in an unventilated room. Exhaust gas contains poisonous carbon monoxide.

 Ground unit to avoid electrical hazards.

 Keep unit dry. Do not expose unit to rain or wet locations.

 Do not refuel when operating. Check for fuel leaks or spilled fuel before each use. DO NOT use if the generator is leaking fuel. Do not operate near flammable materials.

 This symbol indicates that when the end-user wishes to discard this product, it must be sent to separate collection facilities for recovery and recycling.

- **Never operate the engine in rain, snow or wet locations.**
- **Never touch the machine with wet hands.**
- **Ground unit to avoid electrical hazards.**
- **Electrical equipment (including lines and plug connections) should not be defective.**
- **The generating set must not be connected to other power sources, such as the power company supply mains. In special cases where stand-by connection to existing electrical systems is intended, it shall only be performed by a qualified electrician who has to consider the differences between operating equipment using the public electrical supply network and operating the generating set. In accordance with this part of ISO 8528 the differences shall be stated in the instruction manual.**
- **When using extension lines or mobile distribution networks the**

total length of lines for a cross section of 1.5 mm² should not exceed 60 m; for a cross section of 2.5 mm² this should not exceed 100 m.

1.4 FIRE AND BURN HAZARDS




- Gasoline is extremely flammable and explosive under certain conditions. Do not smoke or allow flames or sparks where the generator is refueled or where gasoline is stored. Refuel in a well-ventilated area with the engine stopped and cooled.
- Fuel is combustible and easily ignited. Do not refuel during operation. Do not refuel while smoking or near naked flames. Do not spill fuel.
- Check FUEL LEAKAGE before each use. DO NOT use the

generator if the generator is leaking fuel.

- **The generator is allowed to be tilted down, but ONLY lay down on the Drawbar Side. If lay down on other side, OIL may leak and damage the engine or your property. Also FUEL may leak and cause FIRE or an EXPLOSION.**
- **The muffler becomes very hot during operation and remains hot for a while after stopping the engine. Be careful not to touch the muffler while it is hot.**
- **Some parts of the internal combustion engine are hot and may cause burns. Pay attention to the warnings on the generating set.**
- **Avoid placing any flammable materials near the exhaust outlet during operation.**
- **Keep the generator at least 1 m (3 ft) from buildings or other equipment, or the generator may overheat.**
- **Let the engine cool before storing the generator indoors.**
- **Engine exhaust gases are toxic. Do not operate the generating set in unventilated rooms. When installed in ventilated rooms, additional requirements for fire and explosion protection shall be observed.**


1.5 CONNECTION NOTES

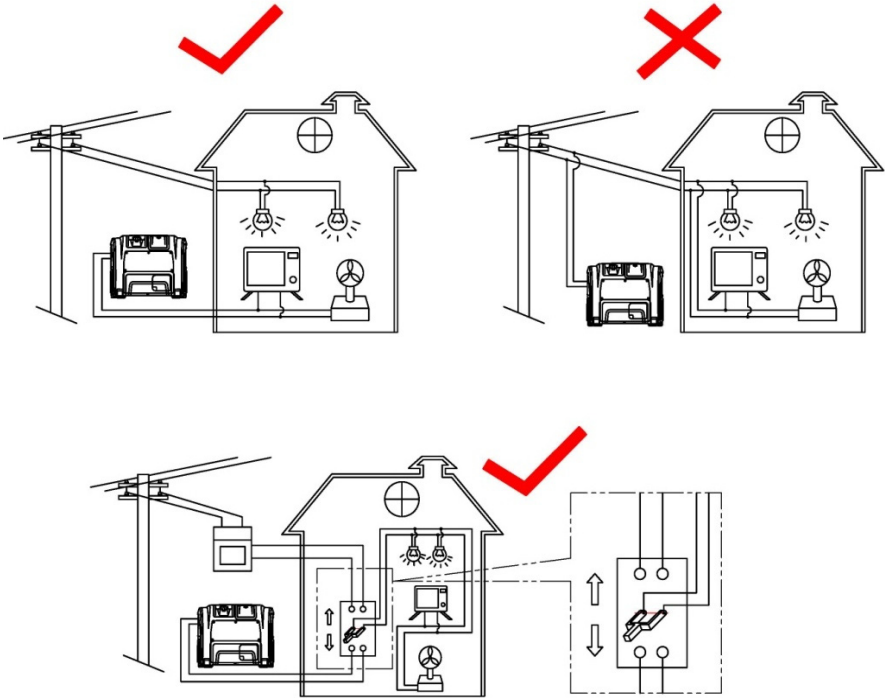

- Do not connect to a building electrical system unless an isolation switch has been installed by a qualified electrician.
- Avoid connecting the generator in parallel with any other generator.

2. IMPORTANT LABEL LOCATIONS

Please read the following labels carefully before operating this generator.

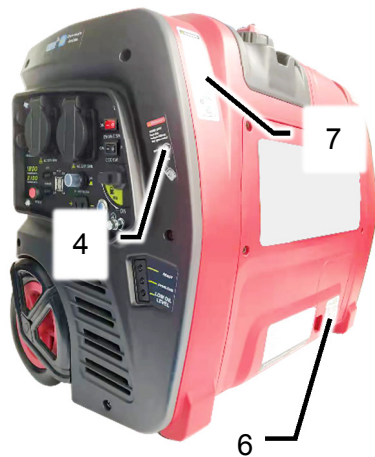

①

⚠ DANGER

Using a generator indoors **CAN KILL YOU IN MINUTES**. Generator exhaust contains carbon monoxide. This is a poison you cannot see or smell.

NEVER use inside a home or garage, **EVEN IF** doors and windows are open.

Only use **OUTSIDE** and far away from windows, doors, and vents.

⚠ WARNING

Tilt down only on this side.

②


⚠ WARNING

- Read owner's manual and all labels before operating.
- Do not operate in an unventilated room. Exhaust gas contains poisonous carbon monoxide.
- Ground unit to avoid electrical hazards.
- Keep unit dry. Do not expose unit to rain or wet locations.
- Do not refuel when operating. Check for fuel leaks or spilled fuel before each use. **DO NOT** use if the generator is leaking fuel. Do not operate near flammable materials.
- This symbol indicates that when the end-user wishes to discard this product, it must be sent to separate collection facilities for recovery and recycling.

③



④

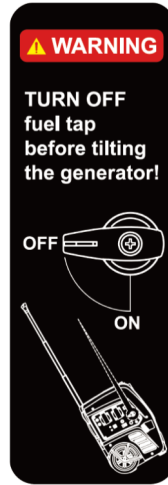


⑤



⑥



⑦

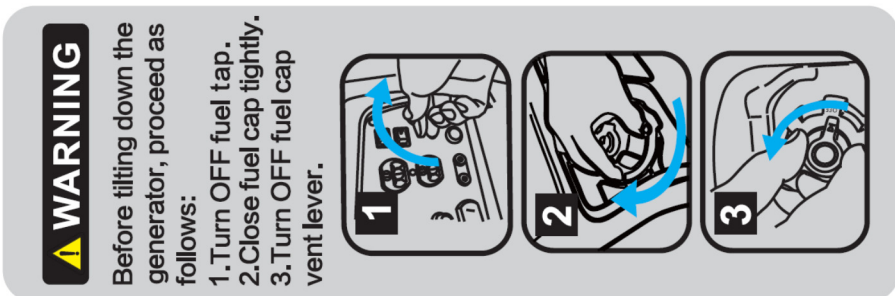

3. UNIT DESCRIPTION


3.1 COMPONENTS IDENTIFICATION



(1). Control Panel: Location of generator controls and output receptacles.

- (2). Fuel Cap: Access to fuel tank for filling.
- (3). Fuel Cap Vent Lever: Control valve between atmosphere and fuel tank.
- (4). Carrying Handle: Lift the generator by this handle only.
- (5). Starter Grip: Pull starter grip for starting engine.
- (6). Choke Knob: Cold engine starting aid.
- (7). Wheels: Move the generator by the wheels.
- (8). Draw Bar Handle: Pull the handle to drag this generator on the ground.
- (9). Maintenance Cover: Allows access to air filter, carburetor and engine oil cap etc.
- (10). Spark Plug Maintenance Cover: Allows access to engine spark plug.
- (11). Oil Maintenance Cover: Allows access to fill the engine oil.
- (12). Fuel Gauge: Check fuel level in fuel tank.
- (13). Muffler: Lowers engine exhaust noise.
- (14). Air Filter: Clean air for engine.
- (15). Carburetor: Supply the fuel-air mixture to engine.
- (16). Spark Plug: Ignites the fuel-air mixture when the engine piston reaches the top of the cylinder.
- (17). Oil Cap: Access to fill or drain engine oil.
- (18). Air Intake Slats: Allow for cooling air to enter the housing.

3.2 CONTROL PANEL

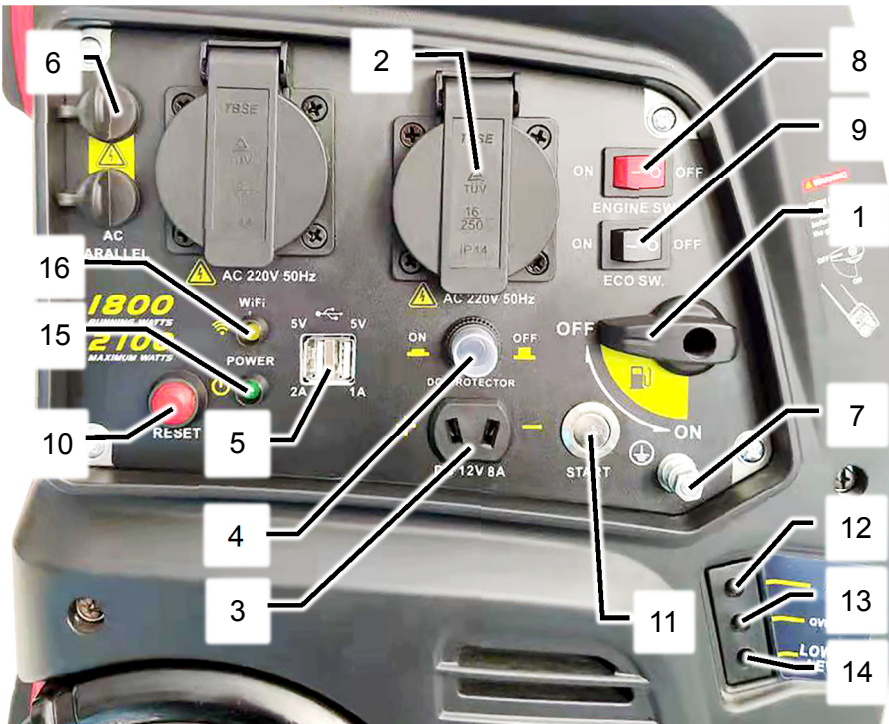

- (1). Fuel Tap: Controls fuel supply to the carburetor.
- (2). AC Receptacles: AC Output receptacles for connecting AC devices.
- (3). 12V DC Receptacle: Connection for re-charging 12V batteries while the generator is in operation. The receptacle can also supply power for some 12V electrical appliances.
- (4). 12V DC Circuit Breaker: Overload protection for the 12V DC receptacle.
- (5). USB Plug: USB Output receptacles for connecting 5VDC devices.
- (6). Parallel Terminal: AC Parallel operation outlets for the same two generators.
- (7). Ground (Earth) Terminal: Grounding point for the generator.

- (8). Engine Switch: This switch turns ON or OFF engine ignition system.
- (9). ECO Switch: Turning on this switch can slows the engine speed when the load is reduced to save fuel, lessen noise and engine wear.
- (10). Reset Button: This switch can be used to recover output of the generator under the condition of overload protection, and unnecessary to restart engine overall.
- (11). Start Button (optional): This switch can be used to start the engine equipped with electric starter (optional equipment).
- (12). READY LED (green): READY LED light comes ON when the generator is operating normally. It indicates that the generator is producing electrical power at the receptacles.
- (13). OVERLOAD LED (red): If the generator is overloaded, or if there is a short circuit at AC receptacles, the overload LED light (red) will go ON, and current to the connected appliance(s) will shut off in a few seconds.
- (14). LOW OIL LEVEL LED (yellow): Lights up when oil level is below safe operating level, and the engine shuts down automatically. Unless you refill with oil, the engine will not start again.
- (15). POWER LED (optional): Lights up when the Gen-mate unit (optional equipment) inside the generator is operating normally.
- (16). Wi-Fi LED (optional): The light comes ON and flash slowly when the generator with Gen-mate unit (optional equipment) is connected to the Gen-mate APP in Smartphone by Wi-Fi.

4. PREPARATION


4.1 ENGINE OIL

NOTE

- **The engine has been shipped from our factory without oil. Put oil before starting.**
- **Recommended engine oil: 4-stroke engine oil, SAE 10W-30 or**

10W-40, API SE/SF/SG/SH/SJ or higher.

- Engine oil quantity: 0.35L.

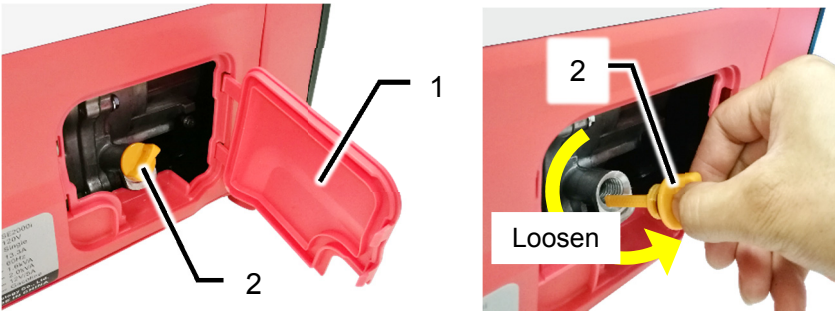


Add Engine Oil:

(1). Open the Oil Maintenance Cover 1, and remove the Oil Cap/Dipstick 2.

(2). Fill the specified amount of the recommended engine oil by the Oil Funnel 4(Refer to the section 10.1 of this manual), and then install and tighten the Oil Cap/Dipstick 2.

NOTE

- Make certain the generator is on a flat, level surface.
- Keep the engine oil level between LOWER LIMIT and UPPER LIMIT. Too much or too little oil will shorten the service life of the engine.

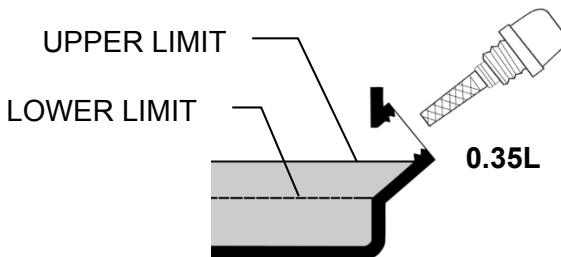


- The engine is equipped with a low oil sensor that will prevent the engine from running. If the oil level falls below a critical threshold, the engine will stop automatically.

- When the engine shuts down automatically by the low oil protection, the LOW OIL LEVEL LED (yellow) will come on, and unless you refill with oil, the engine will not start again.

4.2 FUEL

⚠ WARNING

- Gasoline is extremely flammable and explosive under certain conditions. Do not smoke or allow flames or sparks where the generator is refueled or where gasoline is stored.
- Refuel in a well-ventilated area with the engine stopped.
- DO NOT fill above the Red Level, otherwise it may overflow when the fuel warms up and expands.
- Check FUEL LEAKAGE before each use. DO NOT use the generator if the generator is leaking fuel.
- Immediately wipe off spilled fuel with a clean, dry, soft cloth, since fuel may deteriorate painted surfaces or plastic parts.

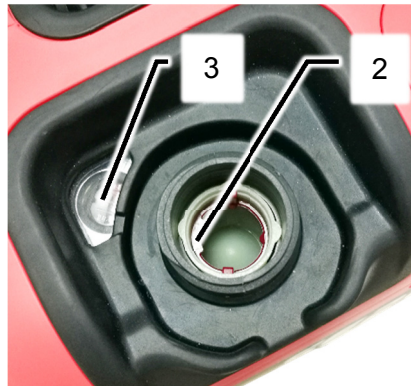

Add Fuel:


- (1). Remove the Fuel Cap 1 and fill the fuel into the tank up to the Red Level 2.
- (2). The fuel level in the fuel tank can be checked through the Fuel Gauge 3.

(3). After fill the fuel, make sure the Fuel Cap 1 is tightened securely.

NOTE

- Use only unleaded gasoline. The use of leaded gasoline will cause severe damage to internal engine parts.
- Never use an oil/gasoline mixture.
- You may use regular unleaded gasoline containing no more than 10% Ethanol (E10).
- Make certain the generator is on a flat, level surface.
- Fuel tank capacity: 4.2L.

5. STARTING THE ENGINE

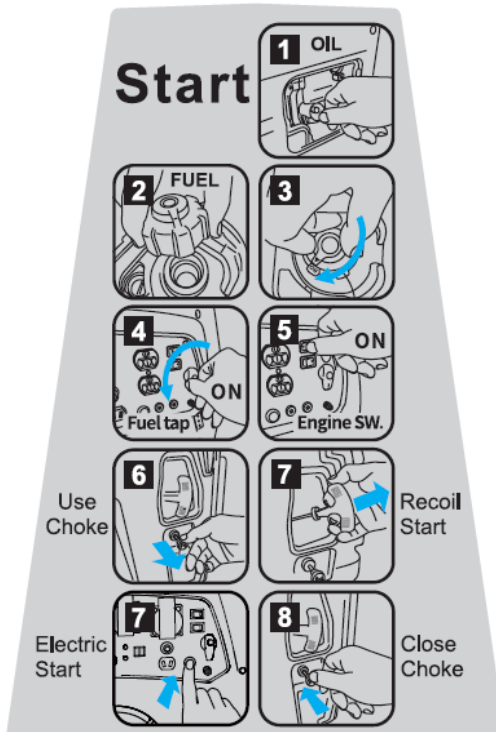


5.1 CHECK ENGINE OIL

Check the oil BEFORE EACH USE with the generator on a level surface and the engine stopped.

RECOMMENDED OIL:

4-stroke engine oil, SAE 10W-30 or 10W-40, API SE/SF/SG/SH/SJ or higher.

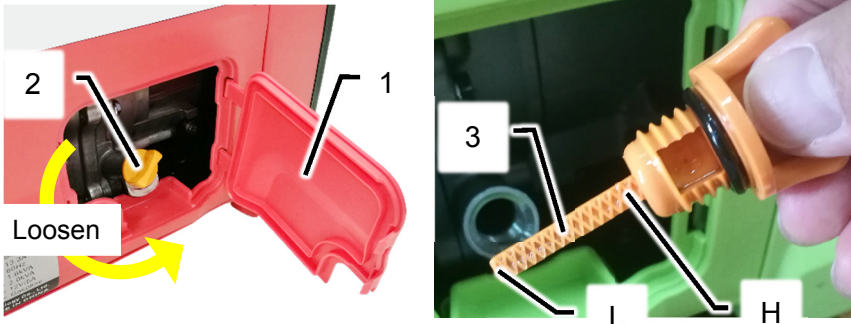

- (1). Open the Oil Maintenance Cover 1.
- (2). Remove the Oil Cap 2 and wipe the Dipstick 3 clean.
- (3). Check the oil level by inserting the Dipstick 3 into the filler neck without screwing it in.
- (4). If the wet line on the Dipstick 3 is between "L" position and "H" position, the oil level is OK. If the oil cannot reach "L" position, the oil level is too low. Fill to the upper limit of the oil filler neck with the recommended oil.
- (5). Tighten the Oil Cap 2 and reinstall the Oil Maintenance Cover 1.
- (6). Check generator for oil leakage.

NOTE

- **Make certain the generator is on a flat, level surface when check the engine oil.**
- **Engine oil quantity: 0.35L.**
- **The engine is equipped with a low oil sensor that will stop the engine automatically when the oil level falls below a critical threshold.**
- **When the engine shuts down automatically by the low oil**


protection, the **LOW OIL LEVEL LED** (yellow) will come on, and unless you refill with oil, the engine will not start again.

5.2 CHECK FUEL

⚠ WARNING

- Do not smoke or allow flames or sparks where the generator is refueled or where gasoline is stored.
- Refuel in a well-ventilated area with the engine stopped.
- DO NOT fill above the Red Level.
- Check **FUEL LEAKAGE** before each use. DO NOT use the generator if the generator is leaking fuel.

Check the fuel **BEFORE EACH USE** with the generator on a level surface and the engine stopped.

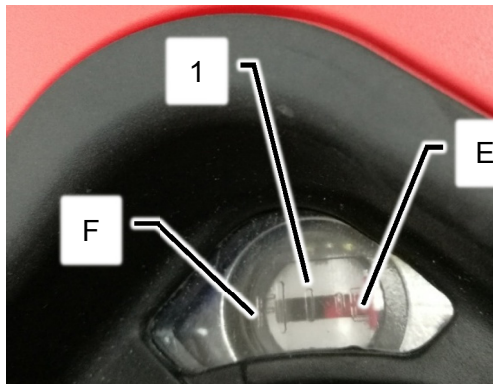

- (1). Checked the fuel level in the fuel tank through the Fuel Gauge 1. If the red mark in the Fuel Gauge 1 is close to "E" position, means the fuel level in the fuel tank is lower. If the red mark in the Fuel Gauge 1 is close to "F" position, means the fuel level in the fuel tank is higher.
- (2). Refuel if necessary.
- (3). After fill the fuel, make sure the Fuel Cap is tightened securely.
- (4). Check generator for fuel leakage.

NOTE


- Use only unleaded gasoline.
- Never use an oil/gasoline mixture.
- Fuel tank capacity: 4.2L.
- Make certain the generator is on a flat, level surface when check the fuel.

5.3 OPEN THE FUEL CAP VENT LEVER




Turn the Fuel Cap Vent Lever 1 to "ON" position.


"ON" position

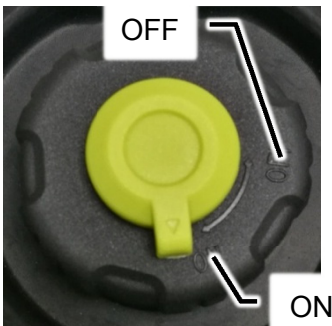

"OFF" position

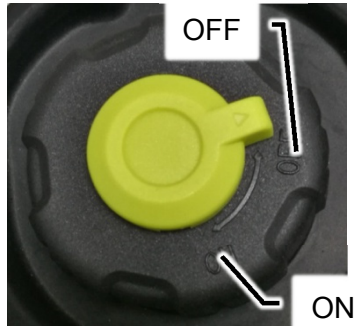

5.4 OPEN THE FUEL TAP

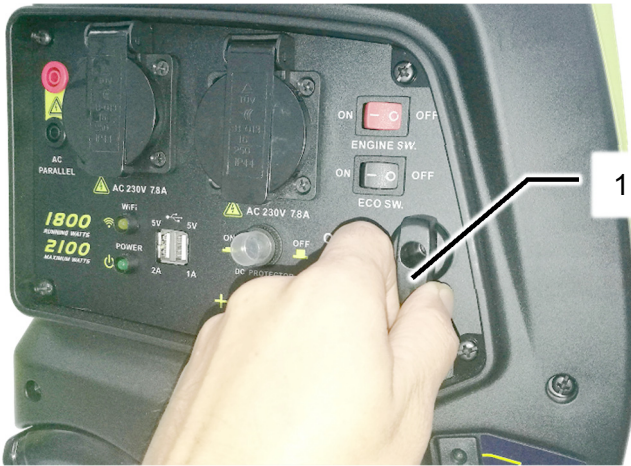

Turn the Fuel Tap 1 to "ON" position.


"ON" position



"OFF" position




5.5 THE ENGINE SWITCH & ECO SWITCH

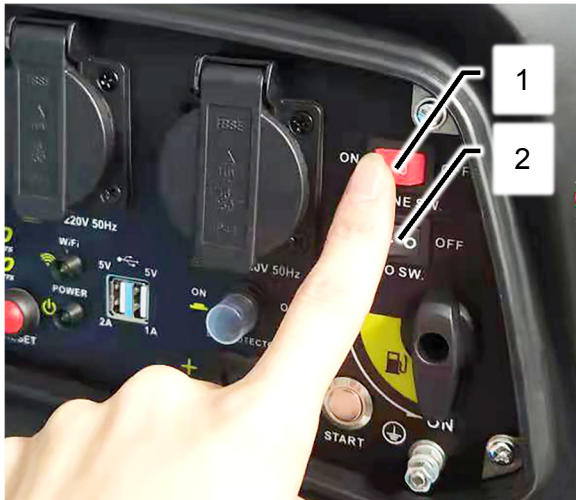

(1). Turn the Engine Switch (Red) 1 to “ON” position.

(2). Turn the ECO Switch (Black) 2 to “OFF” position.

“ON” position

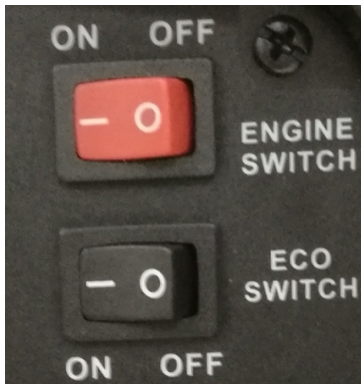

“OFF” position



5.6 USE CHOKE



Pull the Choke Knob 1 fully out to "START" position.

"RUN" position



"START" position



NOTE

- The Choke is not required to start a warm engine. Push the Choke Knob into the "RUN" position.
- Usually keep the Choke Knob in "START" position for only 2 pulls of the recoil starter or 2 pushes of the electric start button. After second pull or push, push Choke Knob into the "RUN" position for up to the next 3 pulls or pushes. Too much choke leads to Spark Plug fouling/engine flooding due to the lack of incoming air. This will cause the engine not to start.
- Keep the Choke Knob in "START" position for more pulls or pushes if weather is cold.

5.7 START THE ENGINE

⚠ DANGER

- Exhaust fumes contains poisonous carbon monoxide (CO) , a colorless and odorless gas. Breathing CO can cause loss of consciousness and may lead to death.
- Operate the generator in a well-ventilated area. Never run your generator inside a garage or house, even if door or window is open.

NOTE

- Make certain the generator is on a flat, level surface when start or operate the generator.
- Turn off or unplug all electrical loads connected to the generator AC Receptacles before starting the engine.
- Keep the Choke Knob in "START" position for more pulls of recoil starter or pushes of electric starter if weather is cold.



Recoil Start:

Pull the Starter Grip 1 slowly until resistance is felt and then pull rapidly.

NOTE

- Do not allow the Starter Grip to snap back against the generator. Return it gently to prevent damage to the starter or housing and to prevent against the dangers of injury caused by the sudden change of rotation direction of the engine.
- Normally the engine can be started within three pulls. Keep the Choke Knob in "START" position for only 2 pulls. After second pull, push the Choke Knob into the "RUN" position for up to the next 3 pulls.



Electric Start (optional):

Push the Start Button 2 to the end and then release it.

NOTE

- Open the Oil Maintenance Cover to connect the Battery Connector 4 before using the electric starter (optional).



- The generator equipped with the electric starter (optional equipment) has a built-in starter battery. If the power of the battery is too low or exhausted after long-term storage, the electric starter will not work normally. When the new generator or generator stored for a long time is used for the first time, please pull it to start by recoil starter, or use the matched charger to charge the battery through the DC Receptacle 3 before using electric starting.
- Normally the engine can be started within three pushes with electric starter. Keep the Choke Knob in "START" position for only 2 pushes. After second push, push the Choke Knob into the "RUN" position for up to the next 3 pushes.
- The electric starter (optional equipment) is equipped with an over-temperature sensor that will shut down the electric starter automatically when the engine temperature is very high unless it became cool.

APP Start (optional):

The generator equipped with the electric starter (optional equipment) and Gen-mate unit (optional equipment) also can be started by Gen-mate APP in smartphones as follows:



SE2000ie 01000108
Rated power : 1800W
Rated voltage : 230V
Rated frequency : 50Hz

Maintenance

Start

Trouble s...

Monitor

5.8 CLOSE CHOKE



After starting the engine, push the Choke Knob 1 fully into the “RUN” position.

"RUN" position




"START" position



NOTE

Wait a few seconds until the engine speed is stable before closing the choke, and more time waiting if weather is cold.

6. AC OPERATION

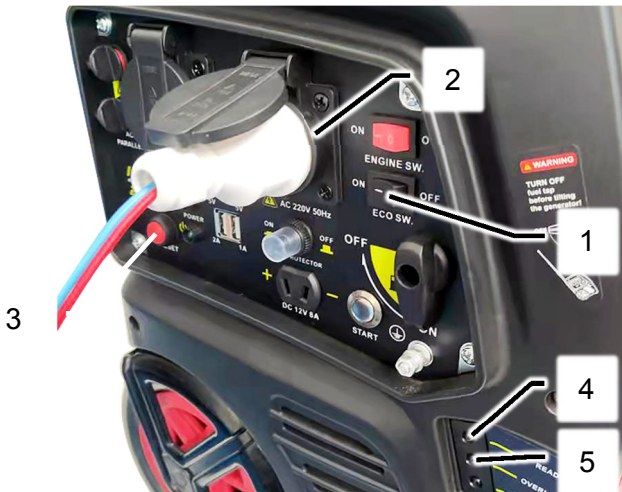

6.1 USE THE GENERATOR:

After starting the engine, let it run for 2 or 3 minutes to warm up, then you can use the generator as follows:

- (1). Make sure the READY LED (green) 4 comes on.
- (2). Turn the ECO Switch 1 to "ON" position to use Economy Control System. This system controls the engine speed according to the connected load. The results are better fuel consumption and less noise.
- (3). Connect plug to the generator AC Receptacles 2 for AC electric devices.
- (4). Turn on the electric devices for operation.

"ON" position



"OFF" position



⚠ WARNING

- AC output voltage is very high, operators must be protected from electric shock at all times. Do not operate with wet hand.
- Do not operate by children without supervision. Do not expose the generator to rain, moisture or snow.
- Be sure to ground (Earth) the generator when the electric appliance is earthed.


NOTE


- The ECO Switch 1 must be turned to "OFF" position when using electric devices that require a large starting current, such as a heavy compressor or some high electrical loads.
- Be sure all electric devices including the lines and plug

connections are in good condition before connection to the generator.

- Be sure the total load is within generator rated output.
- Be sure the receptacle load current is within receptacle rated current.
- If the generator is overloaded (in excess of rated power), or if there is a short circuit in a connected appliance, the OVERLOAD LED (red) 5 will go ON, and the current to the connected appliance(s) will shut off, and the READY LED (green) 4 will go OFF.
- The Reset Button 3 can be used to recover output of the generator under the condition of overload protection, and unnecessary to restart engine overall. But at first check and correct the problem, if there is a short circuit in a connected appliance or wire.
- When an electric motor is started, the OVERLOAD LED (red) 5 may come on. This is normal if the OVERLOAD LED (red) 5 goes off after a few seconds.

6.2 SHUT DOWN THE GENERATOR:

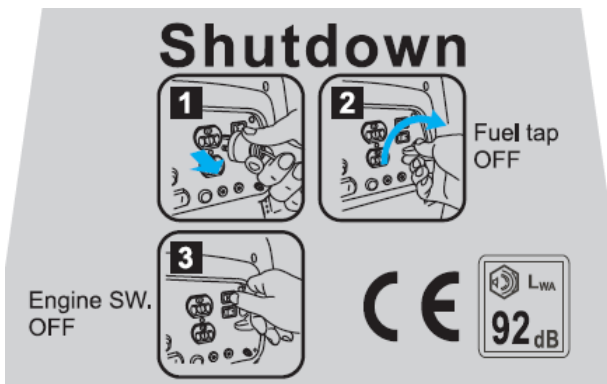

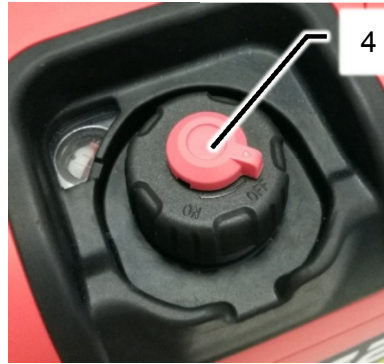

Once the generator is no longer needed it can be shut down:

- (1). Disconnect or turn off all electrical loads connected to the generator AC Receptacles 1.
- (2). Turn the Fuel Tap 2 to the "OFF" position.
- (3). Turn the Engine Switch 3 to "OFF" position.
- (4). Allow the engine to cool well, then turn the Fuel Cap Vent Lever 4 to "OFF" position.

"ON" position



"OFF" position




"ON" position




"OFF" position



"ON" position

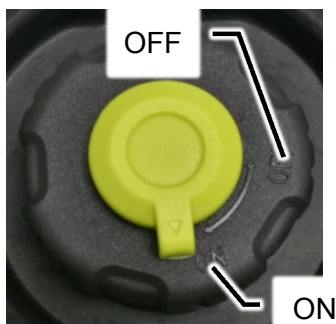


"OFF" position

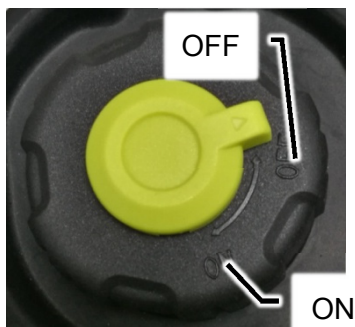

NOTE

- Generator equipped with Gen-mate unit (optional equipment) can be shut down by Gen-mate APP in smartphones, if using the APP, the above step 2/3 is unnecessary, but step 2/4 should be done before tilting or storing the generator.

Management		Add device
	SE2000ie 01000108	Maintenance
	Rated power : 1800W	
	Rated voltage : 230V	
	Rated frequency : 50Hz	
Trouble s...	Monitor	Shut down

- **TURN OFF** all electrical loads connected to the generator AC Receptacles 1 before shutting down by Gen-mate APP in smartphones.

⚠ WARNING


- Always allow the generator to cool off before moving or storing. High temperature will be present at the rear of the unit for some time after shutdown.
- DO NOT turn the Fuel Cap Vent Lever 4 to “OFF” position before cooling the engine. Allow the engine to cool well, if not, the fuel tank can be crushed by cold contraction of the fuel gas in the fuel tank.

7. DC OPERATION

⚠ WARNING

- Never smoke, open flame, sparks or make and break connections at the battery while charging. Sparks may ignite the battery gas. Batteries give off explosive hydrogen gas while recharging. Provide adequate ventilation when charging or using batteries.
- Wear protective goggles and gloves when working around a battery. Battery electrolyte is an extremely corrosive sulfuric acid solution that can cause severe burns. Avoid contact with skin, eyes or clothing. If a spill occurs, flush area with clear water immediately.

7.1 CONNECTING THE BATTERY CHARGING CABLE:

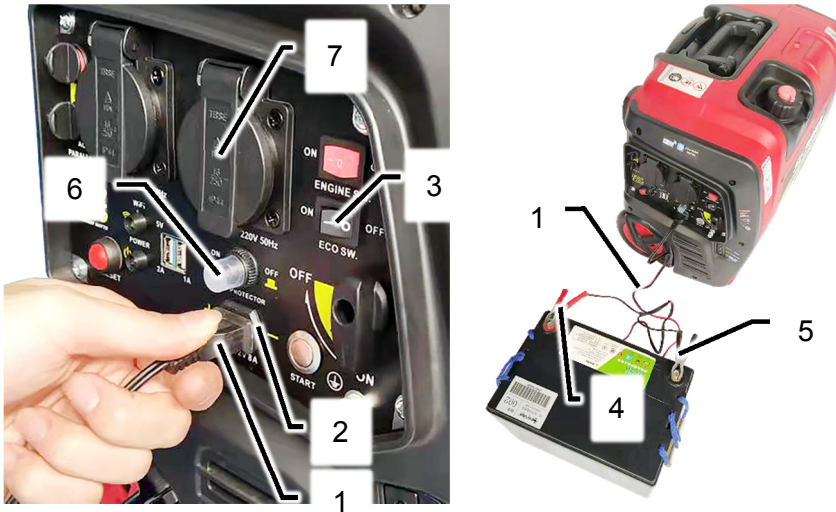

- (1). Connect the Red Charger Clip 4 to positive (+) battery terminal and the Black Charger Clip 5 to negative (-).
- (2). Plug the Charging Cable 1 into the DC Receptacle 2 of the generator.
- (3). Start the engine to charge the battery.
- (4). Charging time will vary with the battery size and condition. The rated DC output power of the generator is about 100W. If the battery capacity is 60Ah and the battery is charged from exhausted state, the charging time is about $12 * 60 / 100 = 7.2$ hours.
- (5). The DC Circuit Breaker 6 DOES NOT prevent over-charging a battery. Remove the Charging Cable 1 from the generator after the battery is fully charged.

NOTE

- Do NOT connect the Charging Cable 1 to AC Receptacle 7. Because AC output voltage is very high, and operators will be in danger of electrical shock hazard.
- The DC Receptacle 2 should ONLY be used for charging 12V Lead-acid batteries. Of course, it can also supply power for

some 12V electrical appliances whose power cannot exceed 100W.

- **DO NOT** overcharge batteries or leave unattended while charging.
- **ALWAYS** keep Red and Black clips separated while the cable is connected to the generator.
- **NEVER** reverse the polarity when connecting the battery terminals to the charging jack. Severe damage may occur to the generator and battery.
- An overloaded DC circuit or a wiring problem will trip the DC Circuit Breaker 6(PUSH button extends out). If this happens, wait a few minutes before pushing in the DC Circuit Breaker 6 to resume operation. If the DC Circuit Breaker 6 continues to go OFF, discontinue charging and contact your authorized generator dealer.


7.2 DISCONNECTING THE BATTERY CHARGING CABLE:

- (1). Turn the Engine Switch to “OFF” position to stop the engine after the battery is fully charged.
- (2). Disconnect the Charging Cable 1 from the DC Receptacle 2 of the generator.
- (3). Disconnect the Black Charger Clip 5 of the Charging Cable 1 from the negative (-) battery terminal.
- (4). Disconnect the Red Charger Clip 4 of the Charging Cable 1 from the positive (+) battery terminal.

8. AC PARALLEL OPERATION

Two SE2000i(E) generators that have the same rated voltage and frequency can be operated in parallel to increase the total available

output power reach 3.6 kW. A Parallel Kit 2(optional equipment) is required for the parallel operation.

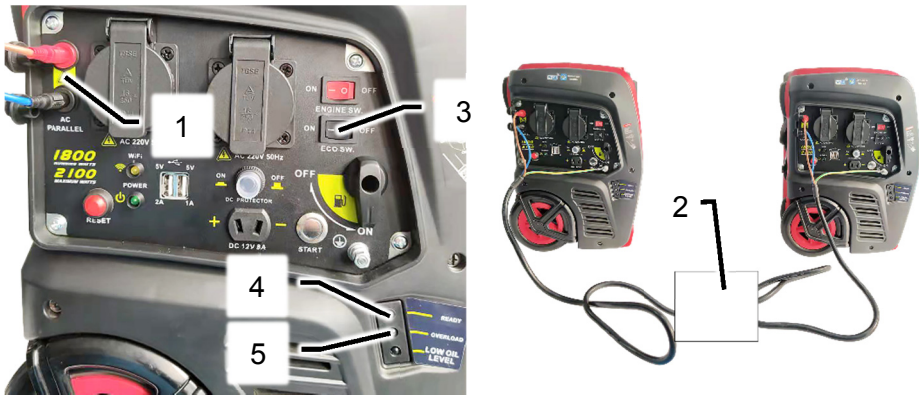

8.1 START AC PARALLEL

- (1). Disconnect or turn off all electrical loads from both generators.
- (2). Connect the Parallel Kit 2 between the Parallel Terminals 1 on two generators.
- (3). Start the two engines and make sure the READY LED (green) comes on.
- (4). Plug the appliance in receptacles of the Parallel Kit 2.
- (5). Turn on the appliance to use.

⚠ WARNING

- **Parallel Terminal 1 output voltage is very high, operators must be protected from electric shock at all times. Do not operate with wet hand.**
- **Do not operate by children without supervision. Do not expose the generator to rain, moisture or snow.**
- **Be sure to ground (Earth) the generator with Parallel Kit 2 when the electric appliance is earthed.**

NOTE

- **Never connect the generator in parallel with any other generator.**
- **Never connect or remove the Parallel Kit 2 when the generator is running.**
- **For single generator operation, the Parallel Kit 2 must be removed.**
- **If an appliance begins to operate abnormally, becomes sluggish or stops suddenly, turn it off immediately. Then disconnect the appliance from receptacles of the Parallel Kit 2, and determine whether the problem is the appliance, or if the rated load capacity of the generator has been exceeded.**
- **The ECO Switch 3 must be in the same position on both generators.**
- **Make sure that the electrical appliance rated power does not exceed the total rated power of two generators.**
- **Most motorized appliances require more than their rated wattage for startup. When an electric motor is started, the OVERLOAD LED (red) 5 may come on. This is normal if the OVERLOAD LED (red) 5 goes off after a few seconds.**
- **If the generators are overloaded, or if there is a short circuit in a connected appliance, the OVERLOAD LED (red) 5 will go on, and the current to the connected appliances will shut off, and the READY LED (green) 4 will go off. Stop the engines and investigate the problem.**

8.2 STOP AC PARALLEL

Once the generators are no longer needed they can be shut down:

(1). Disconnect or turn off all electrical loads from receptacles of the Parallel Kit 2.

- (2). Stop the engine one by one as follows:
- Turn the Fuel Tap to the “OFF” position.
 - Turn the Engine Switch to “OFF” position.
- (3). Allow the generator to cool before moving or storing.

NOTE

TURN OFF all electrical loads connected to receptacles of the Parallel Kit 2 before shutting down by Gen-mate APP in smartphones.


9. SPECIAL REQUIREMENTS

NOTE

- **DO NOT** modify the generator in any way.



- **The generator is allowed to be tilted down, but ONLY lay on the Drawbar Side 1. If lay down on other side, OIL may leak and damage the engine or your property. Also FUEL may leak and cause FIRE or an EXPLOSION.**

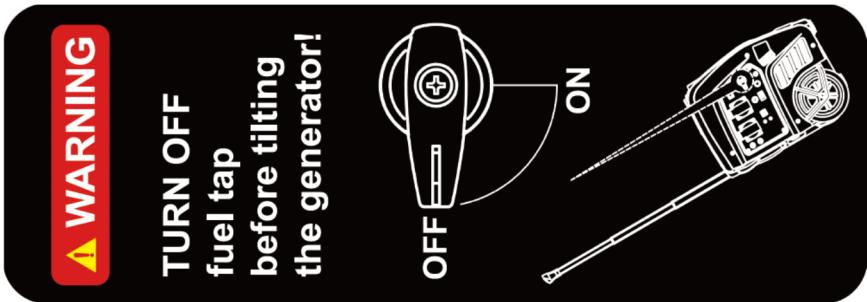

- Turn OFF the Fuel Tap before tilting the generator.
- Before transporting and storing the generator, proceed as follows:
 - (1). Turn OFF the Fuel Tap.
 - (2). Allow the generator to cool off before moving or storing.
 - (3). Close the Fuel Cap tightly.
 - (4). Turn OFF the Fuel Cap Vent Lever.
- DO NOT turn the Fuel Cap Vent Lever to “OFF” position before cooling the engine. Allow the engine to cool well, if not, the fuel tank can be crushed by cold contraction of the fuel gas in the fuel tank.
- Keep all cooling holes open and clear of debris, mud, water, etc. Cooling holes are located on the front panel and the back cover of generator. If the cooling holes are blocked, the generator may overheat and damage the engine, inverter, or windings.
- DO NOT remove any cover of the Generator Case when the engine is running. If not, inverter or other electric parts may be damaged because of bad cooling.

10. MAINTENANCE

Periodic maintenance will keep your generator in the best operating condition.

⚠ WARNING

- Read the instructions before you begin, and make sure you have the tools and skills required.
- Stop the engine to ensure that untimely start-up is not possible before starting maintenance work.
- To reduce the possibility of fire or explosion, be careful when working around gasoline. Use only a nonflammable solvent, not gasoline, to clean parts. Keep cigarettes, sparks, and flames away from all fuel-related.

NOTE

- If you are not familiar with maintenance work, have an authorized dealer do it for you.
- Use ours or equivalent quality parts for replacement. Ask an authorized dealer for further attention.

Maintenance Schedule

Regular Service Period (5)		Each use	Every 6 months or 50 hrs.	Every 1 year or 100 hrs.	Every 2 years or 300 hrs.
Engine oil	Check level	⊙			
	Change		⊙(1)		
Air cleaner	Clean			⊙(2)	
Spark plug	Check-adjust			⊙	
	Replace				⊙
Spark arrester	Clean			⊙	
Valve Clearance	Check-adjust				⊙(3)
Combustion Chamber	Clean				⊙(3)
Fuel tank & filter	Clean			⊙	
Fuel line	Check/Replace				⊙(3)(4)


NOTE


- (1). Change engine oil after the first 10 hrs.
- (2). Service more frequently when used in dusty areas.
- (3). These items should be serviced by your servicing dealer, or by the expertise of professional service personnel.
- (4). Replace fuel line if necessary every 2 years.
- (5). The battery of the generator equipped with electric starter should be charged no more than 3 months by the matched charger, or by running the generator more than 5 hrs.
- (6). For commercial use, long hours of operation to determine proper maintenance intervals. Failure to follow this maintenance schedule could result in non-warrantable failures.

10.1 ENGINE OIL CHANGE

⚠ WARNING

Before tipping the engine to drain the used oil, follow the section 11.1 of this manual to drain the fuel in the carburetor to prevent fuel leakage.

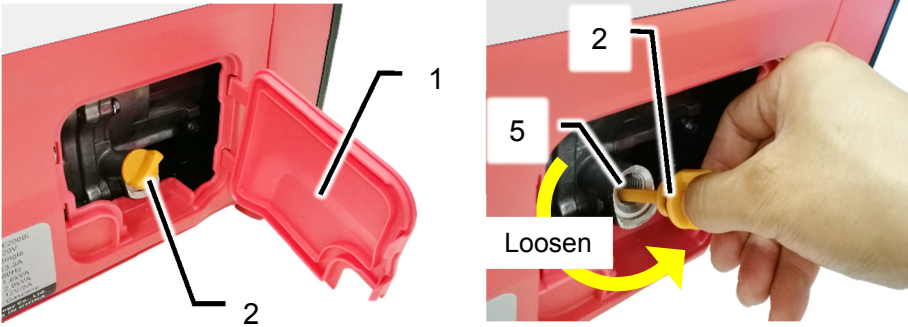

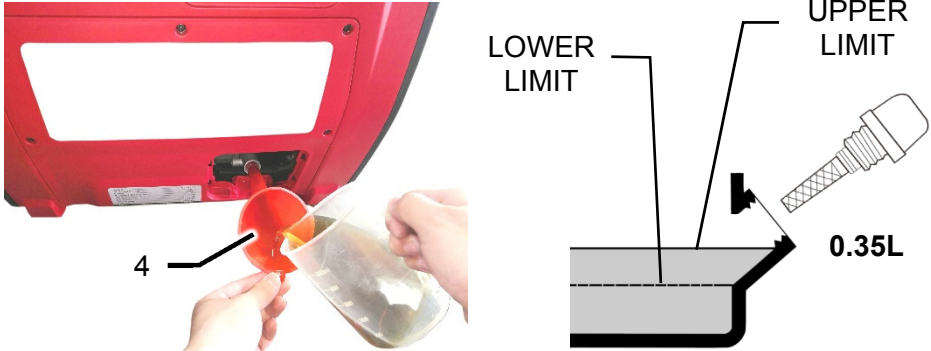

Drain the used oil while the engine is warm. Warm oil drains quickly and completely.

- (1). Turn OFF the Fuel Tap, Close the Fuel Cap tightly and turn OFF the Fuel Cap Vent Lever to reduce the possibility of fuel leakage.
- (2). Open the Oil Maintenance Cover 1.
- (3). Place a suitable Container 3 next to the engine to catch the used oil, and remove the Oil Cap/Dipstick 2.
- (4). Set fully the Oil Funnel 4 outside of the Oil Filler Neck 5, and drain the used oil into the Container 3 by tipping the engine toward the Oil Filler Neck 5.
- (5). With the engine in a level position, fill to the UPPER LIMIT of the Oil Filler Neck 5 with the recommended oil by the Oil Funnel 4. Do not fill more than 0.35L of oil.
- (6). Reinstall the Oil Cap/Dipstick 2 securely.
- (7). Reinstall the Oil Maintenance Cover 1.

NOTE

- **Do not tilt the generator when adding engine oil. This could result in overfilling and damage to the engine.**
- **Improper disposal of engine oil can be harmful to the environment. The used oil should be put in a sealed container, and take it to a recycling station. Do not discard it in a trash bin, dump it on the ground, or pour it down a drain.**

10.2 AIR CLEANER SERVICE



A dirty air cleaner will restrict air flow to the carburetor. To prevent carburetor malfunction, service the air cleaner regularly. Service more frequently when operating the generator in extremely dusty areas.

⚠ WARNING

Using gasoline or flammable solvent to clean the air filter can cause a fire or explosion. Use only soapy water or nonflammable solvent.

NOTE

Operating the engine without an air filter, or with a damaged air filter, will allow dirt to enter the engine, causing rapid engine wear. This type of damage is not covered by the Distributor's Limited Warranty.

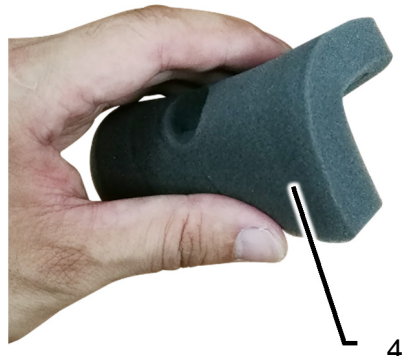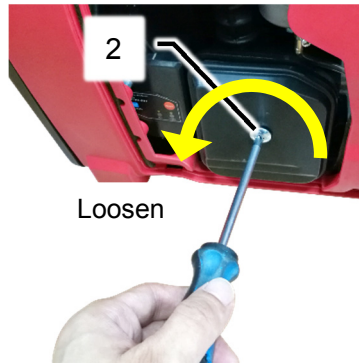



- (1). Loosen five screws and remove the Maintenance Cover 1.
- (2). Loosen the Cover Screw 2 and remove the Air Filter Cover 3.
- (3). Wash the Sponge 4 in a solution of household detergent and warm water, then rinse thoroughly, or wash in nonflammable or high flash point solvent. Allow the air filters to dry thoroughly.
- (4). Reinstall the Sponge 4 and Air Filter Cover 3, and tighten the Cover Screw 2.
- (5). Reinstall the Maintenance Cover 1.

10.3 SPARK PLUG SERVICE


NOTE

- To ensure proper engine operation, the spark plug must be properly gapped and free of deposits.
- An incorrect spark plug can cause engine damage.
- If the engine has been running, allow it to cool before servicing the spark plug.



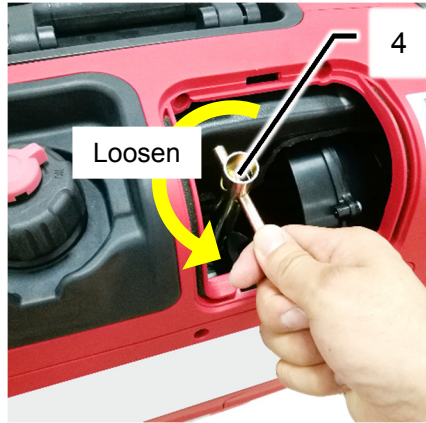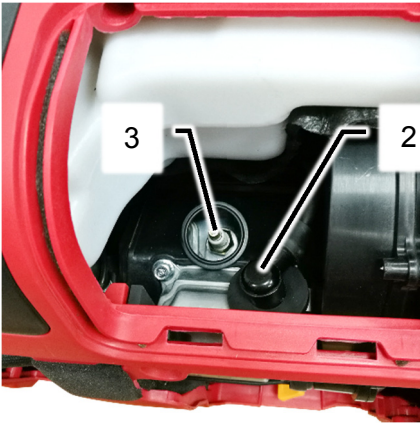

- (1). Unscrew the screw 5, and then remove the Spark Plug Maintenance Cover 1.
- (2). Remove the Spark Plug Cap 2.
- (3). Use a Spark Plug Wrench 4 to remove the Spark Plug 3.
- (4). Inspect the Spark Plug 3. Replace it if the electrodes are worn or if the insulator is cracked, chipped, or fouled.
- (5). Measure the spark plug electrode gap with a wire-type feeler gauge. Correct the gap, if necessary, by carefully bending the side electrode. The gap should be: 0.024 – 0.028 in (0.60 – 0.70 mm) according to Spark Plug type in SPECIFICATIONS.

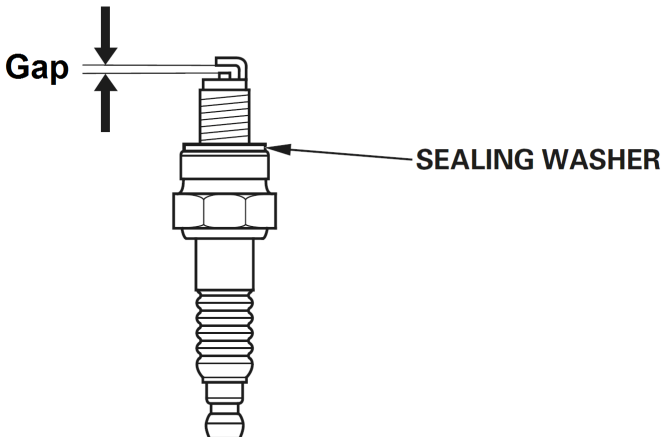

- (6). Check that the spark plug sealing washer is in good condition.

- (7). After the Spark Plug 3 is seated, tighten with a Spark Plug Wrench to compress the washer. If installing a new spark plug, tighten 1/2 turn after the spark plug seats to compress the washer. If reinstalling a used spark plug, tighten 1/8—1/4 turn after the spark plug seats to compress the washer.
- (8). Reinstall the Spark Plug Cap 2 on the Spark Plug 3 securely.
- (9). Reinstall the Spark Plug Maintenance Cover 1.


NOTE



A loose spark plug can overheat and damage the engine. Over tightening the spark plug can damage the threads in the cylinder head.

10.4 SPARK ARRESTER MAINTENANCE

NOTE

- **If the generator has been running, the muffler will be very hot. Allow it to cool before proceeding.**
- **The Spark Arrester must be serviced every 100 hours to maintain its efficiency.**

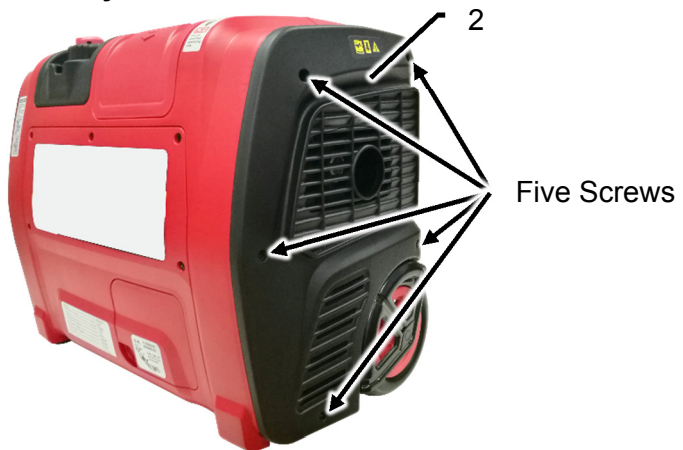

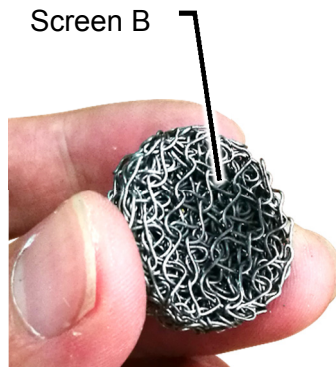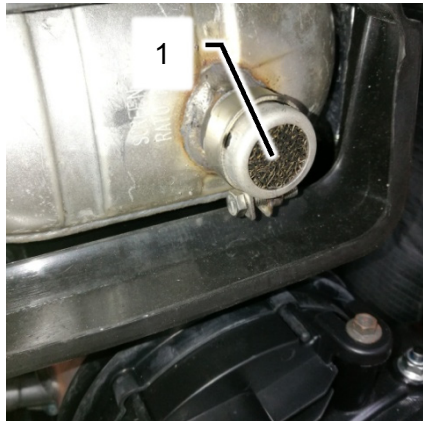


Clean the Spark Arrester 1 as follows:

- (1). Remove the five screws, and remove the Back Cover 2.
- (2). Remove the Spark Arrester 1.
- (3). Use a brush to remove carbon deposits from the Screen A and B.
- (4). Inspect the Screen A for breaks or tears and replace it if necessary.
- (5). Reinstall the Spark Arrester 1, and the Back Cover 2.

10.5 CLEANING FUEL TANK FILTER

⚠ WARNING

Never use the gasoline while smoking or in the vicinity of an open flame.

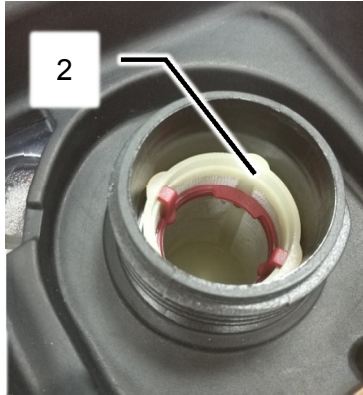

- (1). Remove the Fuel Cap 1 and Fuel Tank Filter 2.
- (2). Clean the Fuel Tank Filter 2 with gasoline. If damaged, replace it.
- (3). Wipe the Fuel Tank Filter 2 and install it.
- (4). Install the Fuel Cap 1 securely.

11. TRANSPORTATION AND STORAGE

⚠ WARNING

- Transport or store the generator only if it has cooled completely.
- Before transporting and storing the generator, proceed as follows:
 - (1). Turn OFF the Fuel Tap.
 - (2). Allow the generator to cool off before moving or storing.
 - (3). Close the Fuel Cap tightly.
 - (4). Turn OFF the Fuel Cap Vent Lever.
- DO NOT turn the Fuel Cap Vent Lever to “OFF” position before cooling the engine. Allow the engine to cool well, if not, the fuel tank can be crushed by cold contraction of the fuel gas in the fuel tank .

It is important to prevent gum deposits from forming in essential fuel system parts such as the carburetor, fuel hose or tank during long-term storage.

If the generator is going to be stored for more than six (6) months, the generator should be prepared as follows:



11.1 DRAIN THE FUEL FROM THE CARBURETOR

"ON" position



"OFF" position



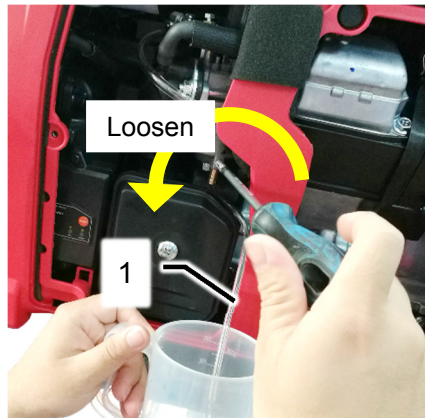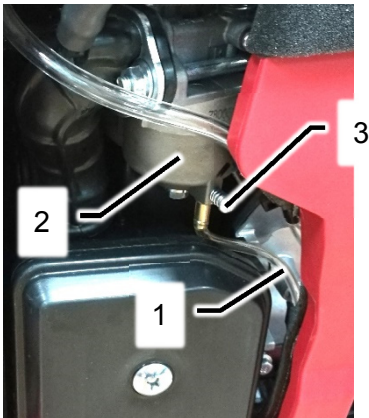



- (1). Turn the Fuel Tap 5 to the “OFF” position.
- (2). Loosen five screws and remove the Maintenance Cover 4.
- (3). Take out the Drain Hose 1 from the hole at the bottom casing, and put it into a suitable container.
- (4). Loosen the Drain Screw 3 anticlockwise.
- (5). Drain the gasoline from the Carburetor 2 into the container through the Drain Hose 1.
- (6). Tighten the Drain Screw 3 clockwise securely.

11.2 DRAIN THE FUEL FROM FUEL TANK



- (1). Unscrew the Fuel Cap, remove the Fuel Tank Filter.
- (2). Empty the fuel tank into the suitable container by slowly tipping the generator toward the Fuel Tank Neck 1.
- (3). Reinstall the Fuel Tank Filter and the Fuel Cap.
- (4). Tighten clockwise the Fuel Cap securely.

11.3 DRAIN THE FUEL FROM THE CARBURETOR AGAIN

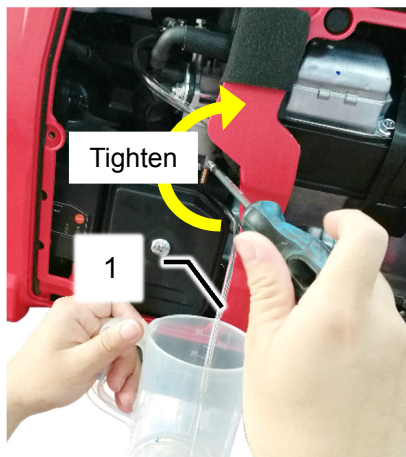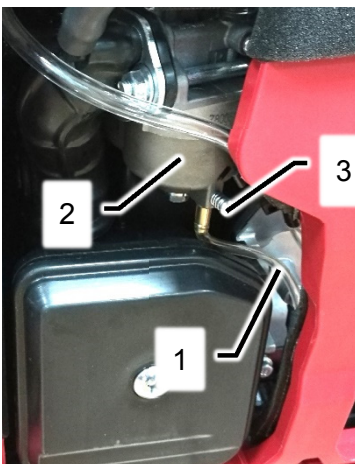

- (1). Turn the Fuel Cap Vent Lever to “ON” position.
- (2). Turn the Fuel Tap to the “ON” position.
- (3). Put the Drain Hose 1 into a suitable container.
- (4). Loosen the Drain Screw 3 counterclockwise.
- (5). Drain the gasoline from the Carburetor 2 into the container through the Drain Hose 1.
- (6). Tighten the Drain Screw 3 clockwise securely.
- (7). Reinstall the Drain Hose 1 into the hole at the bottom casing.
- (8). Reinstall the Maintenance Cover 4.
- (9). Turn the Fuel Tap to the “OFF” position.
- (10). Turn the Fuel Cap Vent Lever to “OFF” position.

⚠ WARNING


- **Gasoline is highly flammable and explosive.**
- **Keep heat, sparks, and flame away.**
- **Handle fuel only outdoors.**
- **Wipe up spills immediately.**

11.4 ENGINE


- (1). While engine is still warm, drain oil from crankcase. Refill with the recommended new oil.
- (2). Remove spark plug and pour about 15ml (1/2 ounce) of engine oil into the cylinder through spark plug hole on the engine cylinder head, and cover spark plug hole with rag. Pull the starting rope several times to coat the cylinder walls with engine oil.
- (3). Install and tighten the spark plug.
- (4). Pull the Starter Grip until you feel compression, then stop pulling. (This prevents the cylinder and valves from rusting)
- (5). Clean the generator outer surfaces. Check that cooling air slots and openings on generator are open and unobstructed.
- (6). Store the unit in a clean, dry place. If possible, store the unit indoors and cover it to give protection from dust and dirt.

12. TROUBLE SHOOTING


When the engine cannot be started:

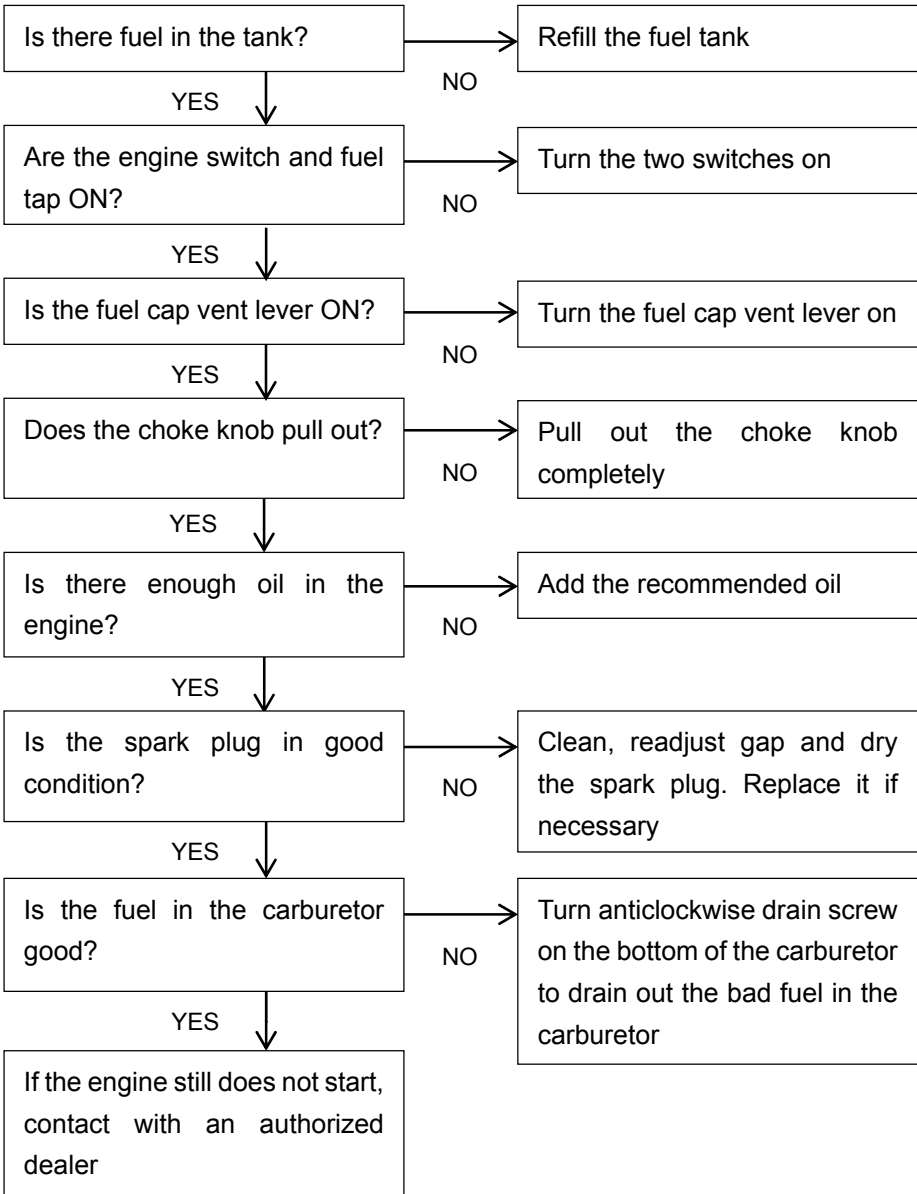


Engine starts, then shuts down:

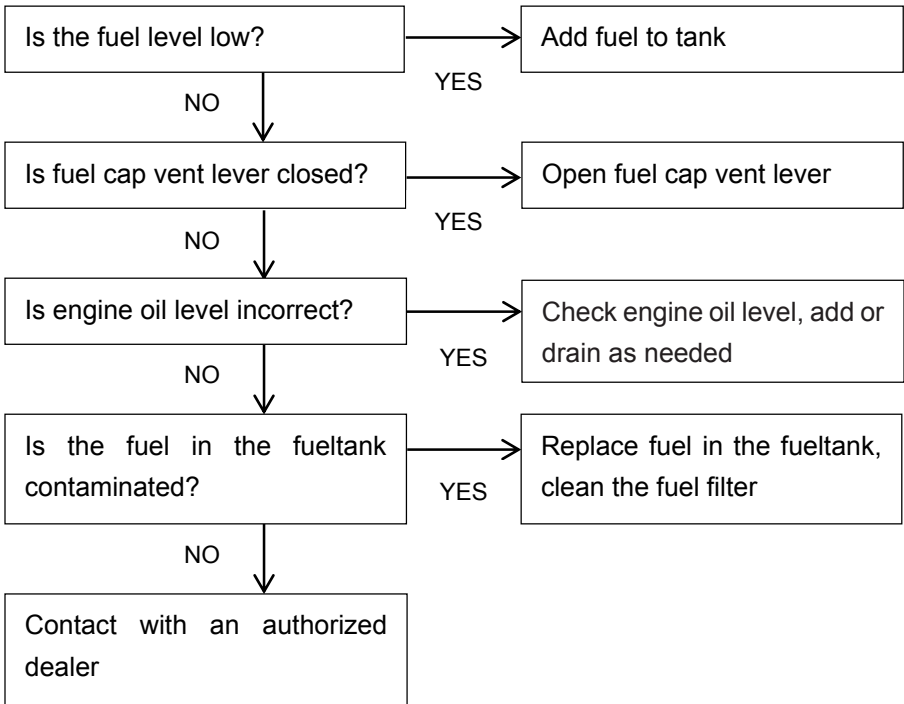


Engine starts, then runs rough:

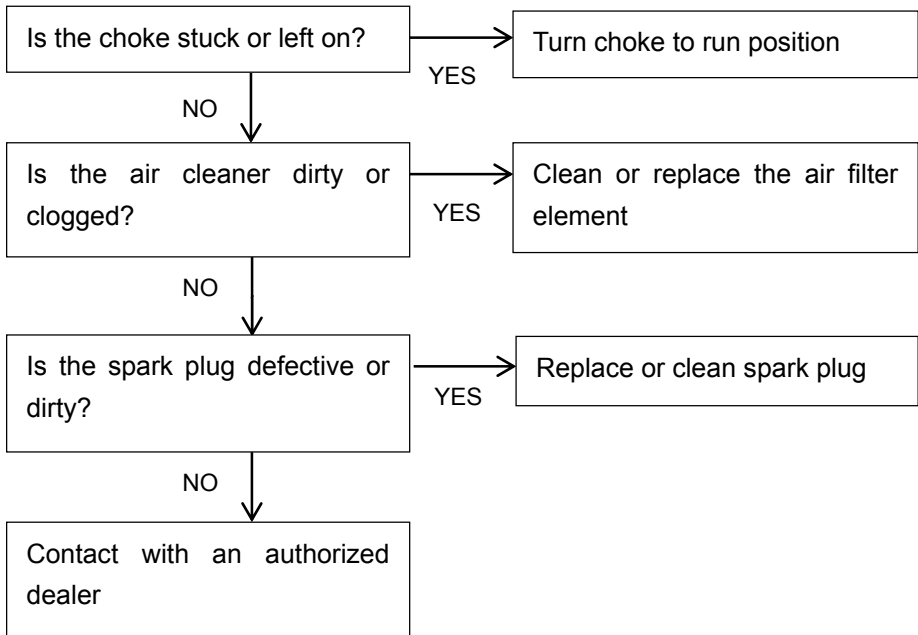


No AC output:

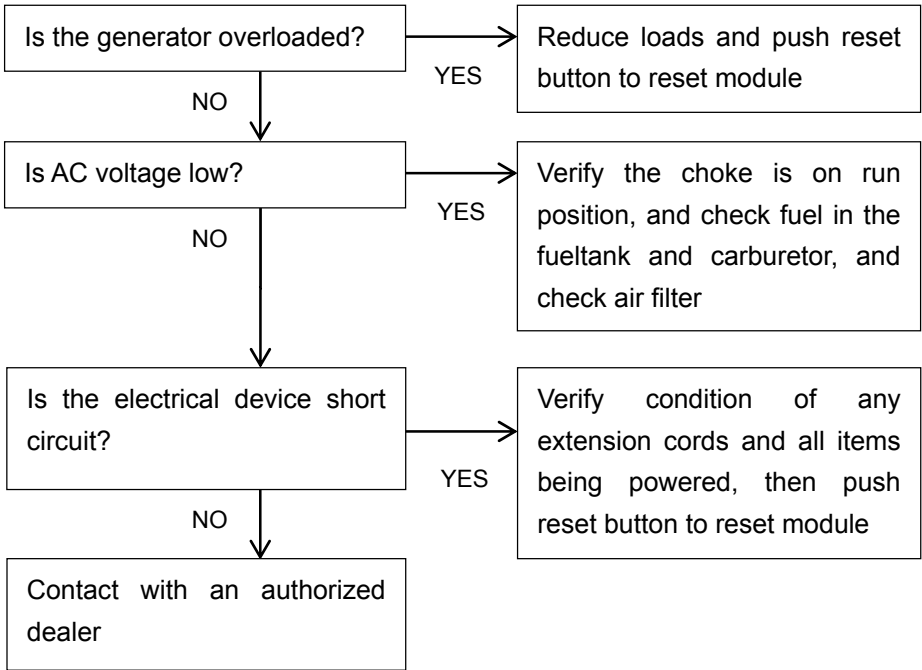

No DC output:

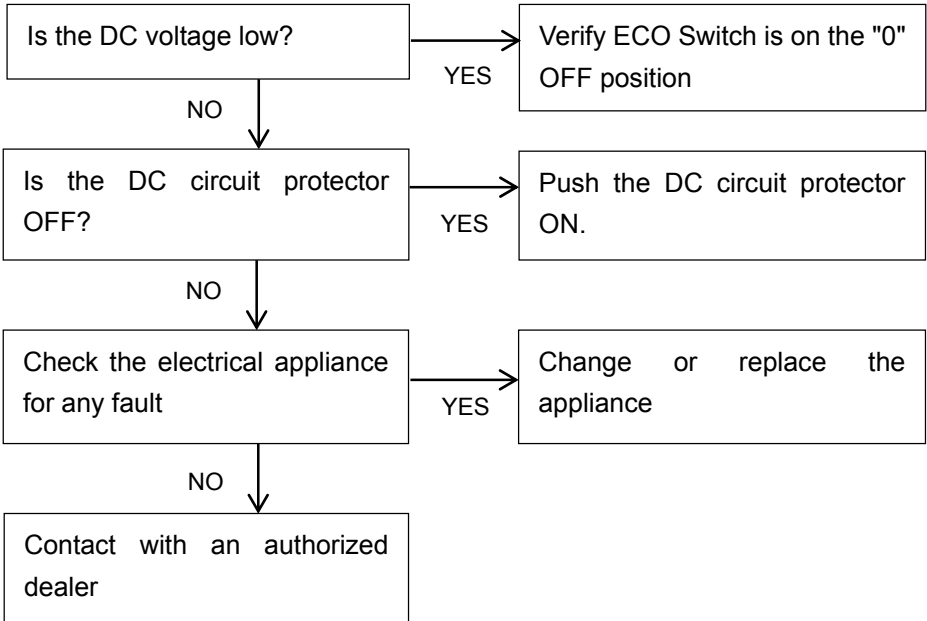

Fuel leaks from drain hoses:

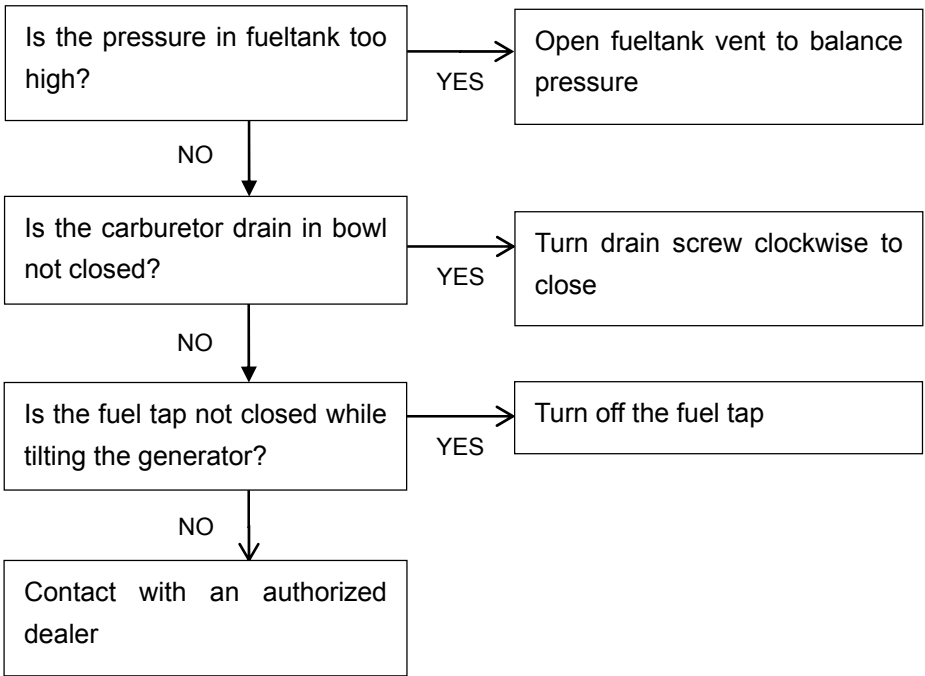

13. SPECIFICATIONS

SE 2000i(E) SPECIFICATIONS

DIMENSIONS AND WEIGHT

Overall Length	530mm (20.9 in)
Overall Width	320mm (12.6 in)
Overall Height	430mm (16.9 in)
Dry Weight	24kg / 26kg (53lbs /57lbs)

ENGINE

Type	4-stroke gasoline OHV	
Cooling System	Forced air	
Cylinder Arrangement	Inclined, single cylinder	
Displacement	80cm ³	
Bore × Stroke	48.6mm × 43.0mm (1.91 in × 1.69 in)	
Operation Hours	3.5Hr@rated load	
	8Hr@1/4 rated load	
Fuel	Unleaded gasoline	
Fuel Tank Capacity	4.2L (1.11 US gal)	
Engine Oil Capacity	0.35L (0.37 US qt)	
Ignition System	CDI	
Starting System	Recoil / Electric starter / APP starter	
Spark Plug	Type	A5RTC (TORCH)
	Gap	0.6~0.7mm (0.024~0.028in)
Noise Pressure Level(L _{PA}) @ From 4m by CE standards	70dBA	

GENERATOR

AC Output	Output Waveform	Pure-Sine Wave, THD <3%
	Rated Voltage*	100/110/120/220/230/240V
	Rated Frequency*	60/50Hz
	Rated Output	1.8kVA
	Maximum Output	2.1kVA
	Safety Device Type	Electronic
DC Output	Rated Voltage	12V
	Rated Current	8A
	USB	5V/2A/1A
	Safety Device Type	DC Protector

NOTE


(1). SE2000i is equipped with recoil starter, and SE2000iE with recoil starter & electric starter.

(2). The generator output specifications are based on the standard environment as follows:


- Altitude: 0m
- Ambient temperature: 25°C
- Relative humidity: 30%

*Specific parameters to see labels on the product.

14. WIRING DIAGRAM

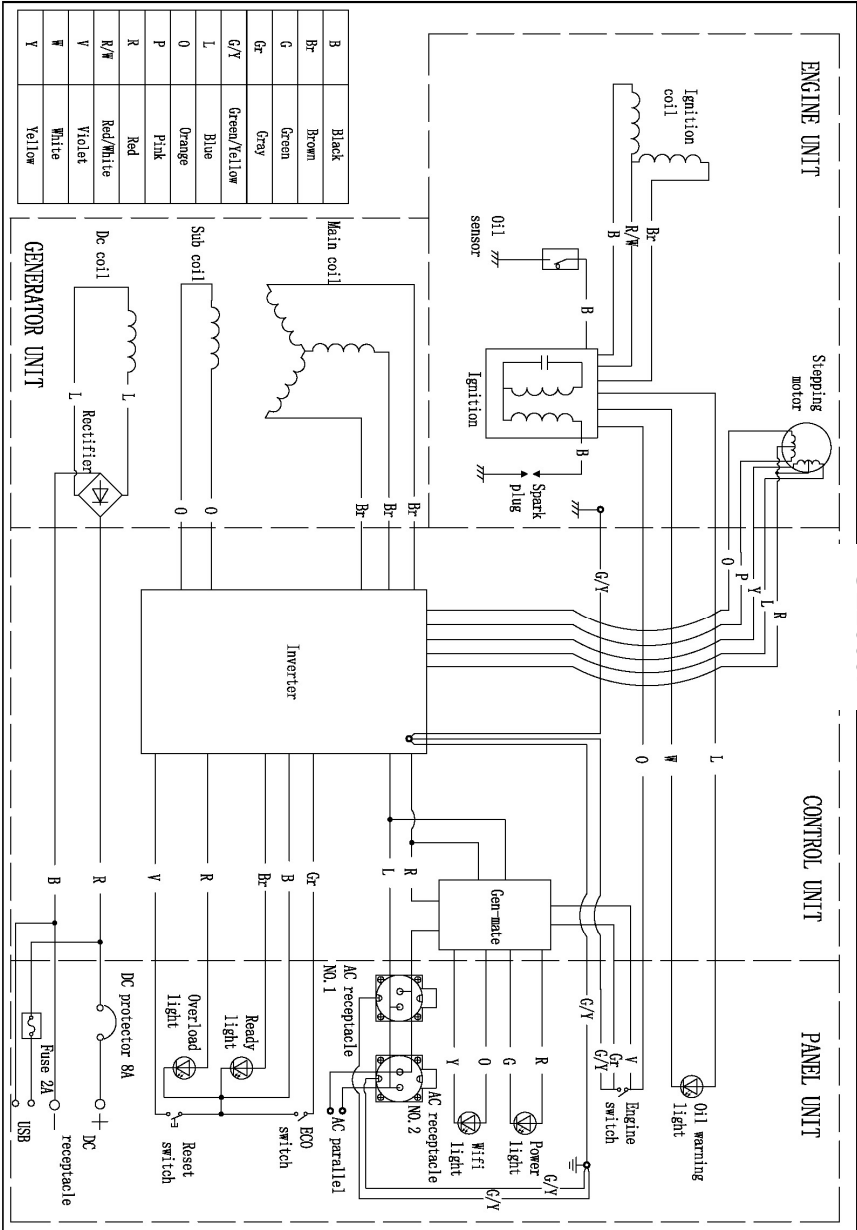

SE20001E

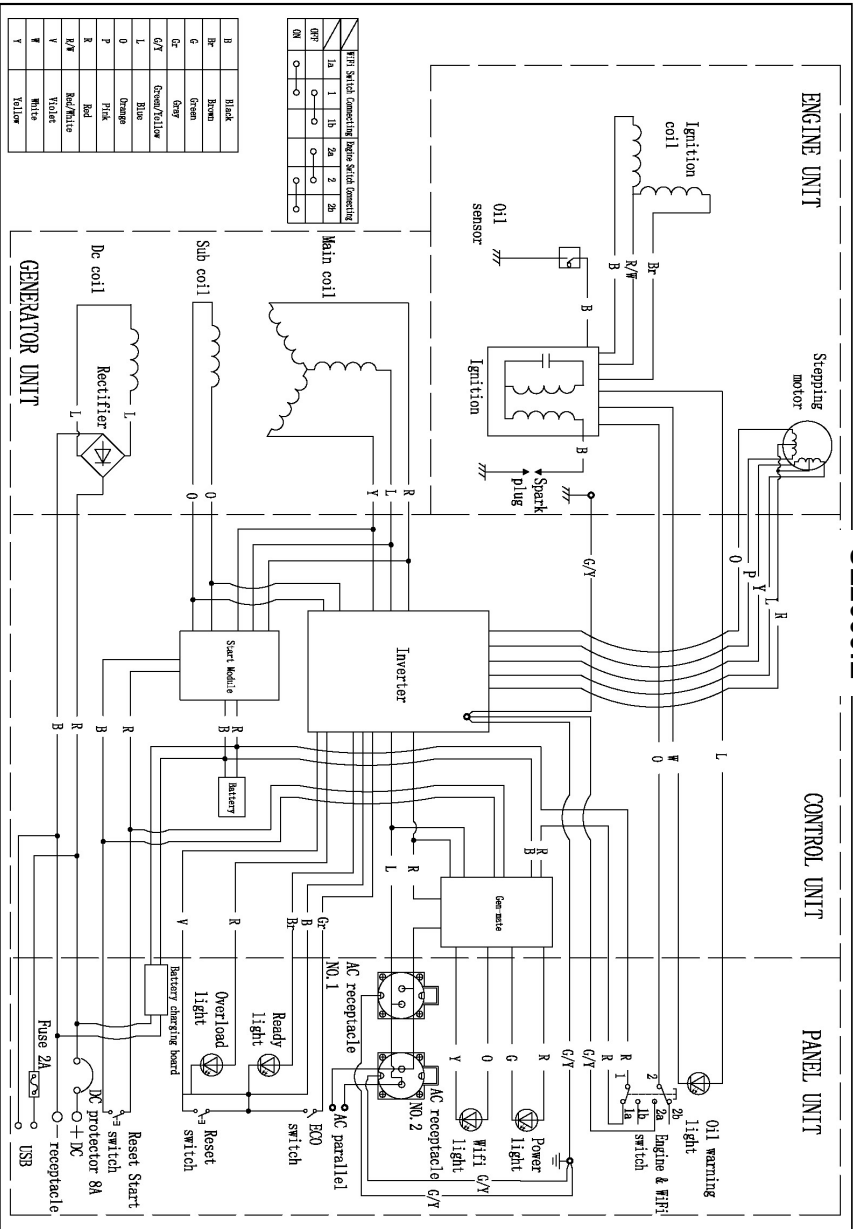

15. ENVIRONMENT CORRECTION

Generating sets may only be loaded up to their rated power under the rated ambient conditions. If generating set use is under conditions which do not conform to the reference conditions as stipulated in this part of ISO 8528 and if cooling of the engine or alternator is impaired, e.g. as a result of operation in restricted areas, a reduction in power is necessary.

The rated power output is based on the standard condition as follows:

- Altitude: 0m
- Ambient temperature: 25°C
- Relative humidity: 30%

Factor of environment correction C:

Altitude(m)	Ambient temperature °C				
	25	30	35	40	45
0	1	0.98	0.96	0.93	0.90
500	0.93	0.91	0.89	0.87	0.84
1000	0.87	0.85	0.82	0.80	0.78
2000	0.75	0.73	0.71	0.69	0.66
3000	0.64	0.62	0.60	0.58	0.56
4000	0.52	0.52	0.50	0.48	0.46

NOTE:

Relative humidity 60% correction factor C-0.01;

Relative humidity 80% correction factor C-0.02;

Relative humidity 90% correction factor C-0.03;

Relative humidity 100% correction factor C-0.04;

Example: Generator rated power $P_N = 1.8\text{kVA}$, Altitude:1000m,

Ambient temperature: 35°C, Relative humidity: 80%,

Actual power P:

$$P = P_N * (C - 0.02) = 1.8 * (0.82 - 0.02) = 1.44\text{kVA}$$

More power More portable



EASY POWER WITH YOU